


FT Aura 5 Lite Manual Addendum

It was found that the included Quick Start Guide omitted the instructions for activating Launch Assist. Please follow the below instructions to activate Launch Assist.

- Launch Assist will command a brisk climb while keeping the wings level.
- To activate Launch Assist:
 - o HOLD your transmitter sticks at low throttle, rudder centered, full left aileron and full up elevator for 3 seconds
- When Launch Assist is active:
 - o The red LED will flash ()
 - o The Ailerons and Elevator will move to keep the wings level and command a climb
- If you are having trouble activating Launch Assist:
 - o Make sure your trims are centered
 - o Keep the aircraft immobile for 6 seconds with the throttle low and aileron, elevator and rudder controls centered.
- Launch Assist is deactivated and normal control resumes when the aileron or elevator is moved away from center after advancing the throttle.