


Aura Wireless Adapter Quick Start Guide

Overview

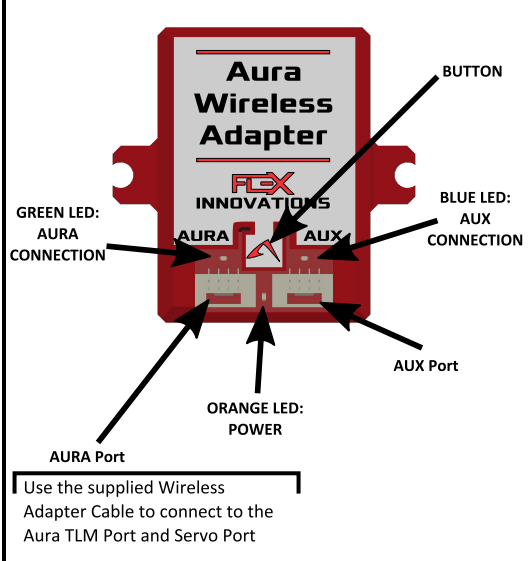


LED Status

- ORANGE LED: POWER
 - OFF: No Power
 - ON: Powered ON (5V - 15V)
- GREEN LED: AURA CONNECTION
 - OFF: Disconnected from Aura Link App
 - ON: Connected to the Aura Link App
 - Fast Flash: Learn New Device Mode
 - Slow Flash: Wireless Adapter OTA Update Mode
- BLUE LED: AUX CONN. (OPTIONAL)
 - OFF: Not Receiving Valid Aux Data
 - ON: Receiving Valid Aux Data

Use the supplied Wireless Adapter Cable to connect to the Aura TLM Port and Servo Port

Wiring Guide

Connect the Aura Wireless Adapter to an Aura 5, Aura 8, or Aura Pro using the Wireless Adapter Cable

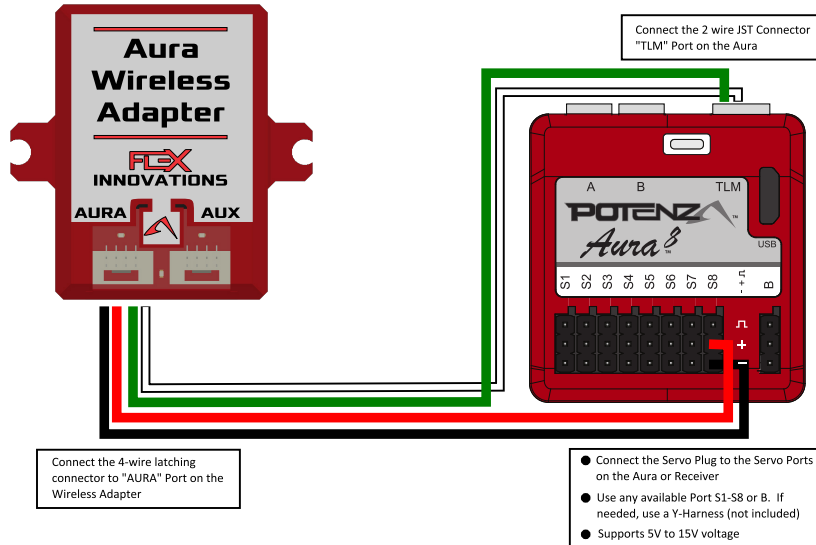

LED Legend	Off:	Solid On:	Slow Flash:	Fast Flash:	Very Fast Flash:
------------	------	-----------	-------------	-------------	------------------

For additional setup information and resources, please visit wiki.flexinnovations.com/aura-link/ or contact us at support@flexinnovations.com

Get the Aura Link App



Initial Wireless Connection

- 1) Connect the Aura Wireless Adapter to the Aura using the Wireless Adapter Cable
- 2) Power on the Aura via the Servo Port Connector
 - The Orange Power LED should be SOLID ON the Wireless Adapter
- 3) Learn New Device Mode will Start and the Green LED Flashes fast
- 4) Open the Aura Link App, Scan for a New Device, and Connect to the AuraBLE device

After Learning the Initial Device, you must start the Learn Device Mode to Connect a new Phone/Tablet to the Wireless Adapter

To Start the Learn Device Mode:

- Hold the Button for 2 seconds until the Green LED Flashes
- OR -
- Start the Learn Device Mode from the Settings Screen in the Aura Link App

Button Actions

- | | | |
|---|---|--|
| Start Learn New Device Mode for adding another phone/tablet device | → | Hold the Button for 2 seconds at anytime until the Green LED Flashes |
| Factory Reset to Clear all trusted phone/tablet devices and reset any saved Wireless Adapter Preferences | → | Hold for 10+ seconds at Power-Up until the Blue LED Flashes Quickly |

Tips and Notes

- If you are having trouble connection the Aura Link App to the Wireless Mode:
 - Make sure the Aura is powered and the Wireless Adapter cable is connected properly
 - Press the Aura Button until the Green LED flashes and try again
- Separate the Wireless Adapter from your Receiver/Antennas, but it's safe to leave installed with the Aura during flight. The Wireless Adapter can remain permanently installed in your airplanes or be moved between them.
- The Aura Wireless Adapter cannot be powered by a USB only connection to the Aura.
- Do not connect to the Aura Link App and PC Aura Config Tool at the same time
- You can rename your Aura Wireless Adapter in the Settings Screen of the Aura Link App

For additional setup information and resources, please visit www.flexinnovations.com/aura-link/ or contact us at support@flexinnovations.com 20260821